


# 4-CHANNEL DIGITAL VIDEO RECORDER

USER'S MANUAL

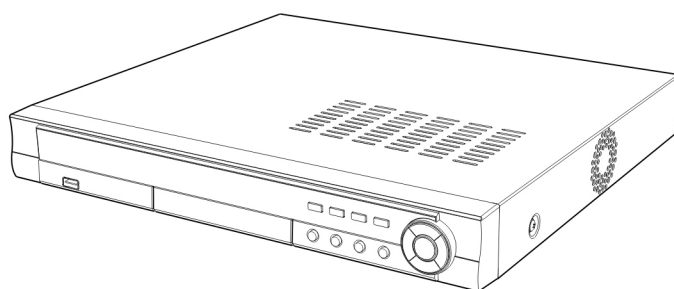





## WARNING

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE.  
REFER SERVICING TO QUALIFIED  
SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

**WARNING:** CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

The information in this manual is believed to be accurate as of the date of publication. IDIS Co., Ltd. is not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

# Important Safeguards

## 1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

## 2. Retain Instructions

The safety and operating instructions should be retained for future reference.

## 3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

## 4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

## 5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

## 6. Placing and Accessories

Do not misplace this equipment other than upright position. This equipment has an open frame SMPS (Switching Mode Power Supply), which may cause a fire or electric shock if anything is inserted into the unit through the ventilation holes on the side of the equipment.

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

## 7. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

## 8. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

## 9. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

## 10. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

## 11. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

## 12. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

## 13. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or the plug has been damaged.
- B. If liquid is spilled, or objects have fallen into the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

## 14. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

## 15. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

## 16. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

## 17. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

## 18. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

## 19. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

## 20. Reduced Air Flow

Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

## 21. Mechanical Loading

Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

## 22. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

## 23. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

## Table of Contents

Chapter 1 — Introduction .....	1
Features .....	1
Package Contents .....	1
Rear Panel Connectors .....	1
Factory Reset .....	3
Front Panel Controls .....	3
Chapter 2 — Operation .....	4
Turning on the Power .....	4
Live Monitoring .....	5
Recording .....	5
Playback .....	6
Searching .....	6
PTZ Control .....	9
Chapter 3 — Configuration .....	11
Overview .....	11
Main Menu .....	12
Appendix .....	19
WebGuard .....	19
DVR Name Service (DVRNS) .....	22
Clip Player .....	23
Time Overlap .....	24
System Log .....	25
Error Code Notices .....	25
Troubleshooting .....	26
Connector Pin Outs .....	26
Map of Screens .....	27
Specifications .....	28



# Chapter 1 — Introduction

## FEATURES

Your color digital video recorder (DVR) provides recording capabilities for 4 camera inputs. It provides exceptional picture quality in both live and playback modes, and offers the following features:

- 4 Composite Input Connectors
- Compatible with Color (NTSC or PAL) and B&W (CCIR and EIA-170) Video Sources
- Auto Detection for NTSC and PAL
- Auto Detection for VGA Monitor
- Recording up to 60 NTSC Images per Second (50 PAL Images per Second)
- Continuous Recording in Disk Recycle Mode
- Recording while Playing Back and Transmitting to Remote Site
- User-friendly Graphical User Interface (GUI) Menu System
- Record Modes: Time-Lapse and Event
- Multiple Search Engines (Date/Time, Calendar, Event)
- Alarm Connections Include: Input, Output and Reset Input
- Built-in Buzzer
- Live or Recorded Video Access via Internet Explorer Web Browser
- Self-diagnostics with automatic notification including hard disk drive S.M.A.R.T. protocol

## PACKAGE CONTENTS

The package contains the following:

- Digital Video Recorder
- Power Cord
- User's Manual (This document)


---

**WARNING: ROUTE POWER CORDS SO THAT THEY ARE NOT A TRIPPING HAZARD. MAKE CERTAIN THE POWER CORD WILL NOT BE PINCHED OR ABRADED BY FURNITURE. DO NOT INSTALL POWER CORDS UNDER RUGS OR CARPET. THE POWER CORD HAS A GROUNDING PIN. IF YOUR POWER OUTLET DOES NOT HAVE A GROUNDING PIN RECEPTACLE, DO NOT MODIFY THE PLUG. DO NOT OVERLOAD THE CIRCUIT BY PLUGGING TOO MANY DEVICES IN TO ONE CIRCUIT.**

---

## REAR PANEL CONNECTORS

No special tools are required to install the DVR. Refer to the installation manuals for the other items that make up part of your system. Your DVR should be completely installed before proceeding.

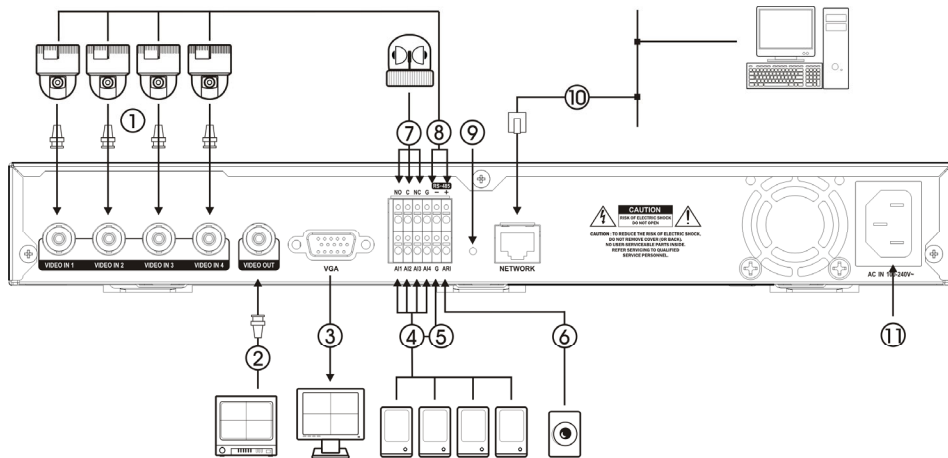

- ① Video In: Connect the coaxial cables from the video sources.
- ② Video Out: Connect a main monitor.
- ③ VGA: Connect a VGA monitor. The VGA monitor is automatically detected when you connect it.
- ④ Alarm In: Connect alarm-in devices. The threshold voltage for NC (Normally Closed) is above 4.3V and for NO (Normally Open) is below 0.3V, and it should be stable at least 0.5 seconds to be detected.
- ⑤ G (GND): Connect the ground side of the alarm input to the G connector.
- ⑥ ARI: Connect an external signal to reset both the Alarm Out signal and the DVR's internal buzzer. Mechanical or electrical switches can be wired to the ARI and G (Ground) connectors. The threshold voltage is below 0.3V and should be stable at least 0.5 seconds to be detected. Connect the wires to the ARI (Alarm Reset In) and G (Ground) connectors.
- ⑦ Alarm Out: Connect an alarm-out device to NC (Normally Closed) and C (Common) connectors or NO (Normally Open) and C (Common) connectors. Permitted current is up to 0.5A for 125VAC, 1A for 30VDC.
- ⑧ RS-485 Port: Connect a PTZ camera. Refer to *Appendix – Connector Pin Outs* for details.
- ⑨ Factory Reset Switch: Use this switch on rare occasions that you want to return all the settings to the original factory settings. Refer to the *Factory Reset* section for details.
- ⑩ Network: Connect a Cat5 cable with an RJ-45 jack. The DVR can be networked with a computer for remote monitoring and searching.
- ⑪ Power Cord: Connect the power cord to the DVR and then to the wall outlet.

#### NOTES:

- The DVR does not support simultaneous operation of the main monitor and VGA monitor.
- It is possible that the DVR does not detect a VGA monitor automatically if the connected VGA monitor does not support auto detect function. In this case, press and hold the DISPLAY button on the front panel for 5 seconds or longer to switch the video output to VGA out. Pressing and holding the button for 5 seconds or longer again returns to the previous video output mode.
- To make connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole below the button. After releasing the button, tug gently on the wire to make certain it is connected. To disconnect a wire, press and hold the button above the wire and pull out the wire.
- All the connectors marked G (GND) are common.
- This Network Port is not connected with cables or wires intended to connect to the outdoor directly.




## FACTORY RESET

To reset the unit, you will need a straightened paperclip:

Turn the DVR off. → Poke the straightened paperclip in the unlabeled hole to the right of the Alarm Output connector, and turn the DVR on. → Hold the switch until the DVR turns on and live monitoring screen appears. → Release the reset switch. All of the DVR's settings are now at the original settings it had when it left the factory.

**CAUTION:** When using the Factory Reset, you will lose any settings you have made. If you want to use the same DVR name registered on the DVRNS server after initializing the system using the factory reset, you need to contact the DVRNS server manager.

## FRONT PANEL CONTROLS

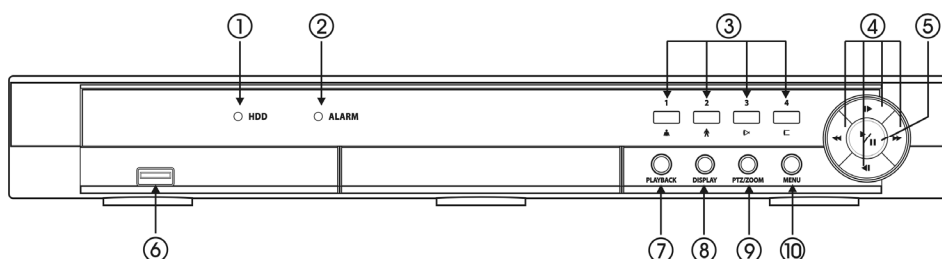

- ① HDD LED: The LED flickers when the DVR is recording or searching video on the hard disk drive.
- ② ALARM LED: The LED is lit when alarm output or internal buzzer is activated.
- ③ Camera Buttons (1 – 4): Pressing the button displays the selected camera in full screen. In PTZ mode, pressing the 1 or 2 button zooms in or out, and the 3 or 4 button focuses near or far.
- ④ Arrow Buttons: Pressing the button controls playback of recorded video in playback or searching mode. Pressing the button moves to another item or changes a selected number value in Main Setup menu. Pressing the button pans or tilts a PTZ camera in PTZ mode.
- ⑤ Play/Pause Button (⏮/⏭): Pressing the buttons freezes the current screen in the live monitoring mode. In the playback or search mode, pressing the button plays back images at regular speed or pauses playing video. In the Main Setup menu, pressing the button selects an item or completes the entry you have made. The blue LED is lit around the button while the unit is turned on.
- ⑥ USB Port: Connecting the USB device allows you to upgrade the software, to copy video clips and to import or export DVR settings.
- ⑦ PLAYBACK Button: Pressing the button in the live monitoring mode enters the playback mode and pressing the button again exits the playback mode. It also loads the PTZ preset in the PTZ mode. In the playback mode, pressing and holding the button for two seconds or longer starts copying video clips. *Chapter 2 – Operation → Searching, Clip Copy* for details.
- ⑧ DISPLAY Button: Pressing the button toggles screen mode between quad and sequence. When the DVR does not detect a VGA monitor automatically, pressing and holding the button for 5 seconds or longer will toggle the video output between Video Out and VGA out. During clip copy, you cannot switch the video output mode.
- ⑨ PTZ/ZOOM Button: Pressing the button toggles PTZ mode and zoom mode. In the live monitoring mode, pressing the button enters PTZ mode. In the PTZ mode, pressing the button enters zoom mode. Pressing the button again exits the zoom mode.
- ⑩ MENU Button: Pressing the button launches or closes the Main Setup menu in the live monitoring or recording mode, Search Menu in playback or searching mode, or PTZ menu in PTZ mode.

## Chapter 2 — Operation

### TURNING ON THE POWER

Connecting the power cord to the DVR turns on the unit. The unit will take approximately 30 seconds to initialize.

The DVR provides five operation modes: live monitoring, recording, playback, searching and PTZ mode. When the DVR operates first, it displays quad screen and starts recording.



The description of OSD icons is as follows:

- CAM1** Camera title
- Recording mode (: Time-lapse, : Event, : Time-lapse & Event)
- PTZ** PTZ mode
- Zoom mode
- Network connected
- Freeze mode
- Sequence mode
- HDD Recycle mode
- % Remaining storage space
- Schedule recording off
- Being clip copied
- Playback mode

#### How to change the password...

There is no default password and you can designate a password. You will be asked the password when entering Main Setup menu. Refer to *Chapter 3 – Configuration → Main Menu, SYSTEM* for changing password.

#### How to change the system date/time ...

You can change the system date/time. Refer to *Chapter 3 – Configuration → Main Menu, SYSTEM* for changing the system date/time.

## LIVE MONITORING

### To Change Screen Mode


- Full-screen

Pressing a camera button in quad screen mode displays that camera in full screen.



- Quad screen

Pressing the DISPLAY button in full screen mode displays four cameras at once.

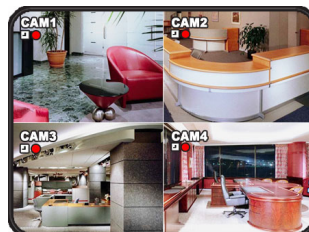

- Sequence screen

Pressing the DISPLAY button in quad screen mode displays four cameras in sequence. Pressing the DISPLAY button again in sequence screen mode returns to the quad screen mode.



- Freeze screen

Pressing the ⏸ (Play/Pause) button freezes the current screen. Pressing the button again releases the freeze screen mode.





## RECORDING

When you turn the DVR on, it starts recording according to the default recording schedule. You can configure recording schedule. When the DVR is in the time-lapse recording mode, it records video during the scheduled time. When the DVR is in the event recording mode, it records video when an event occurs within the scheduled time. Refer to *Chapter 3 – Configuration → Main Menu, RECORD* for details.

## To Enter Recording Mode



- Time-Lapse Recording

- ① Main Menu → RECORD

- Select  or  in Record Mode.
- Set up the recording speed and quality for time-lapse recording.
- Set up the recording schedule.

- Event Recording

- ① Main Menu → RECORD

- Select  or  in Record Mode.
- Set up the recording speed and quality for event recording.
- Set up the recording schedule.

- ② Main Menu → EVENT


- Set up motion or alarm-in events.

## PLAYBACK

Once video has been recorded, you can view it. When playing video for the first time, the DVR will display the most recent image. When playing video subsequent times, the DVR will start playing video from the last recalled image.

## To Enter Playback Mode

Pressing the PLAYBACK button in the live monitoring mode enters the playback mode and plays recorded video.

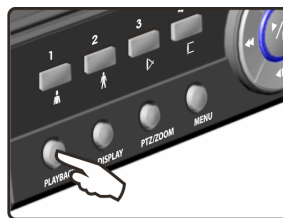

Playback buttons on the front panel perform the following functions as described below:



- ▶▶ Go to the next image
- ▶▶▶ Forward Play (toggles the playback speed from ▶▶, ▶▶▶ and ▶▶▶▶)
- ◀◀ Go to the previous image
- ◀◀◀ Backward Play (toggles the playback speed from ◀◀, ◀◀◀ and ◀◀◀◀)
- ⏸ Play/Pause

## SEARCHING

The DVR provides various search engines: Date/Time, Calendar and Event, and also supports clip copying a video segment.


## To Enter Searching Mode

Pressing the MENU button in the playback mode enters the Search mode and displays the Search Menu. Selecting Exit Search exits the search mode. Select the desired search mode in the search menu.

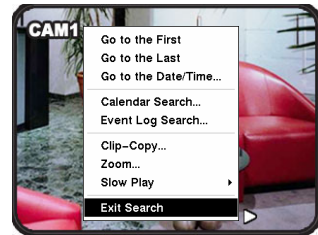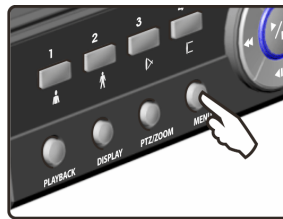


- **Go To the First:** Select to go to the first recorded image.
- **Go To the Last:** Select to go to the last recorded image.
- **Slow Play:** Select to play video at low speed (x1/2, x1/3, x1/4, x1/6, and x1/8)
- **Date/Time Search**

 Changing the desired date and time to search for and clicking the **Go** button displays the recorded image of that date and time. Pressing the (Play/Pause) button plays the recorded video.



- **Calendar Search**

Days with recorded video on the calendar and hours in which video was recorded on the timetable will be highlighted. Selecting the desired date or time and clicking the **GO** button display the recorded image of that date or time. Pressing the button plays the recorded video.

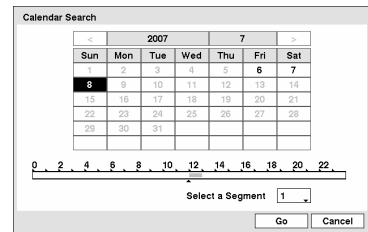

If the DVR's time and date have been reset to a time that is earlier than some recorded video, it is possible for the DVR to have more than one video stream in the same time range.

In this case, select the video stream you want to search in the **Select a Segment** option. Refer to *Appendix – Time Overlap* for further information on searching time-overlapped video streams.

- **Event Search**

Selecting the event log to search for displays the recorded image of that event. Pressing the button plays the recorded video. Refer to *Chapter 3 – Configuration → Main Menu, RECORD* for further information on setting event recording.



Selecting **Option...** allows you to specify the event search condition.

**From/To:** Set up to designate a specific period of video to search. Select **Check Time Overlap** and select one of the overlapping start and stop time if the DVR's date and time have been reset and the DVR has more than one overlapping start and stop time. Selecting **First** or **Last** searches video from the first or to the last recorded images.

**Alarm-In, Motion or Video Loss:** Select channels to include specific event types in your search condition.

**Record Channels:** Select channels to include every recorded event regardless of the event type in your search condition.

**Disk Almost Full, Disk Bad, Disk Temperature or Disk S.M.A.R.T.:** Select to include self-diagnostic events in your search condition.

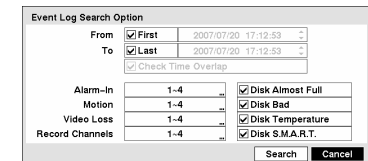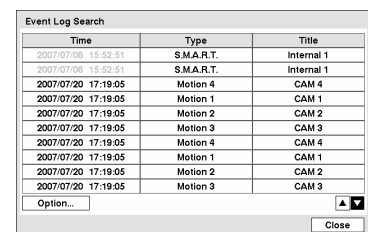

- **Clip Copy**

It allows you to copy recorded video clips to external storages. The copied video clips can be viewed on computers. Refer to *Appendix – Clip Player*.


**From/To:** Set up to define a specific period of video to copy. You can simply set the period of video to copy by using the **PLAYBACK** button on the front panel in the playback mode. Pressing and holding the **PLAYBACK** button for two seconds or longer sets the starting point. Pressing and holding the **PLAYBACK** button for two seconds of longer again sets the ending point. Selecting **First** or **Last** copies video from the first or to the last recorded image.

**Channels:** Choose to select a camera of the video to copy.

**Password:** Choose to assign a password to use when playing the copied video clips.

**Dest.:** Choose to select a storage device for clip copy.

**File Name:** The DVR automatically assigns a file name to the video clip, but you can assign a desired file name.

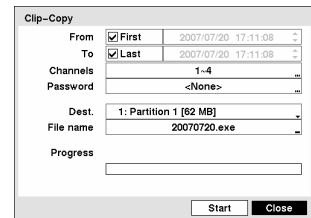

---

**NOTES:**


- The time bar on the calendar during Calendar search is one-hour segments. If a segment is highlighted, it means that some video was recorded during that hour. However, it does NOT mean video was recorded for the entire hour.
  - The lower number of the Segment during Calendar search indicates the latest recorded video.
  - It is possible that no recorded image displays on the current screen. Press the **DISPLAY** button and change the screen mode 2x2. You will be able to easily see the camera have recorded video during target time.
  - The USB device for clip copy must be FAT16 or FAT32 format.
  - While copying video clips on the CD-RW, the recording speed might decrease.
  - When naming a file of video clip to copy, you cannot use the following characters: \, /, :, \*, ?, ", <, >, |. The DVR will automatically add the date and ".exe" to the file name.
  - The file size for clip copy is limited to 2GB.
  - During Clip Copy, you cannot shut the system down or clear data on the storage device. Refer to *Chapter 3 – Configuration → Main Menu, STORAGE* for clearing data on the storage device
  - Do NOT disconnect the USB cable or the power from the external drive while copying video clips. If the external drive is shut down or the USB cable is disconnected while copying video clips, THE DVR SYSTEM MAY NOT WORK NORMALLY OR THE EXTERNAL DRIVE COULD BE DAMAGED, and you will get an error message the next time you try to copy video clips. You will need to power down the DVR and restart it to get rid of the error message. Once the file system of the USB-IDE hard disk drive has been corrupted, this error message cannot be dismissed. Even after restarting the DVR it may automatically restart while preparing to clip copy. You must recover the file system using the recovery program, or you must reformat the hard disk drive.
-

## PTZ CONTROL


PTZ control is available for only PTZ cameras that allow pan, tilt, zoom, focus or preset etc.

### To Enter PTZ Mode

- ① Connect a PTZ device to the DVR and set up the PTZ device. Refer to *Chapter 3 – Configuration → Main Menu, PTZ* for details. When the PTZ device is set up, the PTZ icon appears on the screen.

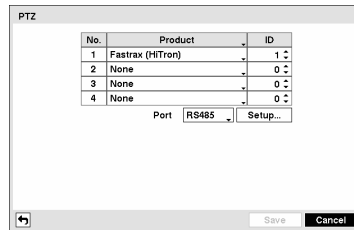


- ② Pressing the PTZ/ZOOM button in the live monitoring mode and selecting a PTZ camera enters PTZ mode. The PTZ icon flickers in the PTZ mode.

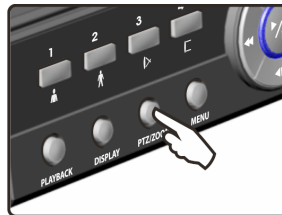

### To Control PTZ Cameras

- Pan and tilt

Pressing the arrow buttons pans or tilts the selected camera.

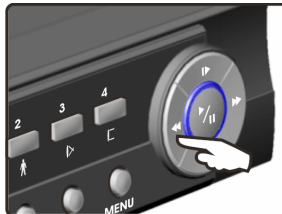


- Zoom

Pressing the camera button 1 zooms in and pressing the camera button 2 zooms out.



- Focus



Pressing the camera button 3 focuses near and pressing the camera button 4 focuses far.

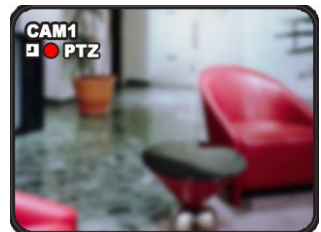




## To Run Preset


- ① Pressing the MENU button in PTZ mode displays the PTZ menu.

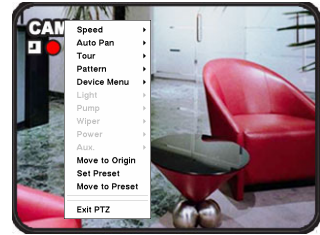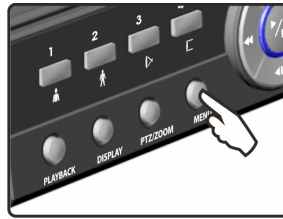


- ② Move to Set Preset in the PTZ menu and select it by pressing the ⏮ (Play/Pause) button. Pressing the ⏭ button displays the Set Preset screen.

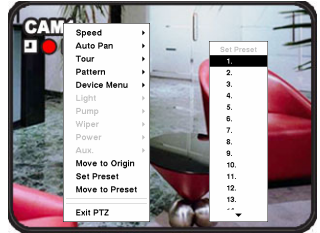

- ③ Pressing the ⏮ button again displays a virtual keyboard. Enter the preset name by pressing the arrow buttons and ⏮ button, and then press the OK button.

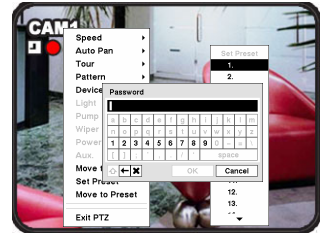

- ④ Move to Move to Preset in the PTZ menu and select it by pressing the ⏮ button. Pressing the ⏭ button displays the Move to Preset screen. Pressing the PLAYBACK button while in the PTZ mode directly moves to the Move to Preset screen.

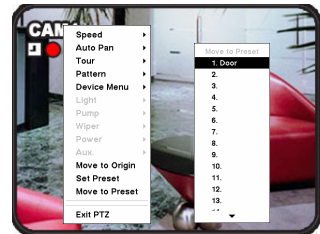

- ⑤ Selecting the desired preset name by pressing the ⏮ button moves to the selected preset number view.




**NOTE:** Depending on the camera specifications, some features on the PTZ menu may not be supported. Refer to the camera manufacturer's instructions for the proper settings.




## Chapter 3 — Configuration

### OVERVIEW

#### How to Enter Main Setup Menu

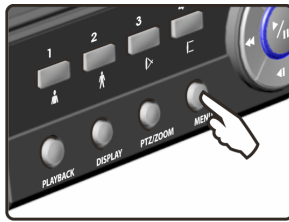

- ① Pressing the MENU button in the live monitoring mode enters a Main Setup menu. Entering a Main Setup menu is password protected.

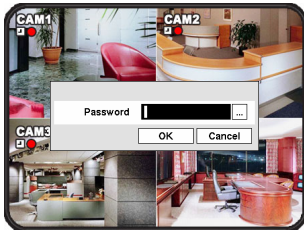


- ② Enter the password by pressing the camera buttons or virtual keyboard (1 to 9), and a Main Setup screen appears. There is no default password.

#### How to Select Items




Move to the desired item by pressing the arrow buttons (▶, ▶▶, ◀◀ and ◀). Pressing the ⏸ (Play/Pause) button selects the item.


#### How to Change Values

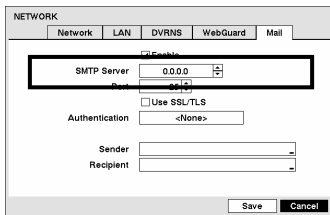






Select the desired item and press the arrow buttons (▶ and ◀) to increase or decrease the value. Pressing the ⏸ button completes the entry.

## How to Enter Characters

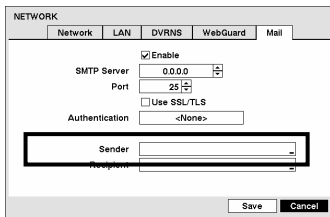

     - ① Select the desired item and press the  button, and a virtual keyboard is displayed.

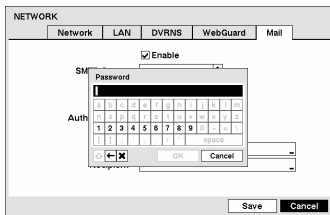

- ② Move to the desired character by pressing the arrow buttons, and enter the desired character by pressing the  button and using space,  (upper or lower case change),  (backspace) or  (delete). Pressing the OK button saves the characters you entered.


## MAIN MENU

Your DVR can be set up using various screens and dialog boxes.




- **SYSTEM:** Select to change the language, OSD display option, password and system date/time, to display the system version and system log, to upgrade the software, to save the DVR settings, or to shut down the system.
- **RECORD:** Select to set up recording quality, mode and schedule.
- **EVENT:** Select to set up the event detection.
- **NETWORK:** Select to set up network settings.
- **PTZ:** Select to use a PTZ camera.
- **STORAGE:** Select to check the storage status.


## NOTES:

- When the installed hard disk drive is not formatted, a message box appears asking you to format the hard disk drive. If you want to record video, you need to format the hard disk drive.
- You will see  button throughout the screens. Select the button to reset that screen to its default settings.

## SYSTEM

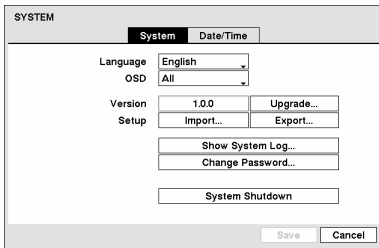


- **Language:** Choose the desired language.
- **OSD:** Choose to enable or disable OSD (On Screen Display).  
*None:* Choose to not display OSD information.  
*Camera:* Choose to display camera title, recording status and PTZ icons on each camera screen.  
*Status:* Choose to display zoom, network connection, freeze, sequence and recycle icons, and date/time information on the bottom of the screen.  
*All:* Choose to display both Camera and Status information.

- **Version:** Displays the software version of the DVR. To upgrade the software, connect the USB device containing the upgrade package file (.rui) to the USB port on the front panel and select **Upgrade...** button. When the Upgrade screen appears, choose the desired upgrade file. The system restarts automatically after completing the upgrade.
- **Setup:** Choose to import saved DVR settings or exports the current DVR settings.  
*Import...:* To import saved DVR settings, connect the USB device containing the setup file to the USB port on the front panel and select the desired setup file. Selecting **Include Network Setup** changes the network settings.  
*Export...:* To save the current DVR settings in .dat file format, connect the USB device to the USB port on the front panel and name the settings.
- **Show System Log...:** Choose to display the system logs (up to 5,000 from the latest). The  icon will be displayed in the last column for system activities of the remote site. Refer to *Appendix – System Log* for the details of system log information.
- **Change Password...:** Choose to change the password.
- **System Shutdown:** Choose to shut the system down.

**NOTE:** Even after changing the DVR settings by importing saved settings, the time-related settings (Date/Time, Time Zone and Daylight Saving Time) will NOT be changed.

**CAUTION:** The USB device must be FAT16 or FAT32 format.

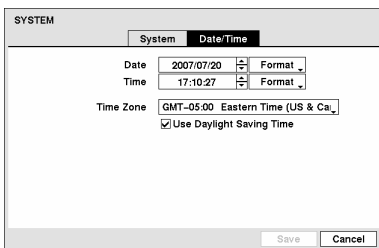

- **Date:** Choose to set the date of the system. Select **Format** button to change the date format.
- **Time:** Choose to set the time of the system. Select **Format** button to change the time format.
- **Time Zone:** Choose the time zone. Select **Use Daylight Saving Time** to apply the daylight saving time.

**NOTE:** The clock will not start running until you have selected the **Save** button.

## RECORD

No.	Day	Range	Mode	Channels	Settings
1	All	00:00 - 24:00		1-4	

- **Recycle:** Select to record over the oldest video data once all available storage space has been used. When it is not selected, the DVR stops recording once all available storage has been used.
- **Resolution:** Choose to set up the recording resolution.
- **Event Record Dwell:** Choose to set up the length of time to record for the associated event. Refer to *Event* in this chapter for information regarding event recording.

- **Schedule Type – None:** Choose to not record.
- **Schedule Type – Basic:** Choose to set up recording settings for all camera channels at a time.  
*Time Record ips/Quality* – Choose to set up the recording speed/quality for time-lapse recording.  
*Event Record ips/Quality* – Choose to set up the recording speed/quality for event recording.  
*Record Mode* – Choose to set up the recording mode. (: Time-lapse recording, : Event recording, : Time-lapse & Event recording)  
*Time Schedule* – Choose to set up the recording schedule for time-lapse and event recording.
- **Schedule Type – Advanced:** Choose to set up recording settings for each camera channels.  
*Auto Deletion* – Adjust the length of time recorded data will be kept by using the bar. Selecting **Never** will disable the Auto Deletion function. You can set the DVR to automatically delete video recorded earlier than the user-defined period under three conditions: at midnight, whenever the system reboots or whenever the user changes the Auto Deletion settings.

*No.* – Indicates a schedule number. The higher the number is, the higher priority it has.

*Day* – Choose the days that the recording will take place.

*Range* – Set up the time range that the recording will take place.

*Mode* – Choose the recording mode. (: Time-lapse recording, : Event recording, : Time-lapse & Event recording)

*Channels* – Choose which cameras will be recorded.

*Settings* – Define the recording speed (ips: image per second) and quality for time-lapse and event recording independently.

– Choose to delete the recording settings.

*Add Schedule...* – Choose to add a schedule. Up to 20 schedules can be registered.

## EVENT

No.	Sensitivity	Zone	Min. Blocks	Alarm-Out	Notify
<input checked="" type="checkbox"/> 1	3 / 3	192	1 / 1		
<input type="checkbox"/> 2	3 / 3	192	1 / 1		
<input type="checkbox"/> 3	3 / 3	192	1 / 1		
<input type="checkbox"/> 4	3 / 3	192	1 / 1		

Motion Ignoring Interval: 2 sec. Daytime Setup...

Save Cancel

- The DVR can notify you when a motion is detected in a camera channel by sounding an alarm or beep or by sending an e-mail.
- **No.:** Select to set the video motion detection for entire cameras (No.) or an individual camera.
- **Sensitivity:** Adjust the DVR's sensitivity to motion for Daytime and Nighttime independently. Smaller numbers provides lesser sensitivity. (1: the least sensitive, 5: the most sensitive)

- **Zone:** Define the area of the image where you want to detect motion; e.g., a doorway, and the Motion Detection Zone screen is laid over the video for the selected camera. You can set up motion detection zones by selecting or clearing blocks. You can select or clear four individual blocks in a group at a time, and individual blocks within the group are selected or cleared by using the camera buttons. Pressing the (Play/Pause) button displays the menu screen, and each item in the menu has the following functions;  
*Select/Select All:* Select to activate highlighted blocks/all blocks to detect motion.  
*Clear/Clear All:* Select to deactivate highlighted blocks/all blocks not to detect motion.  
*Reverse/Reverse All:* Select to activate inactive highlighted blocks/all inactive blocks and deactivates active highlighted blocks/all active blocks.  
*OK/Cancel:* Select to accept changes and closes Zone setup./Exits Zone setup without saving changes.
- **Min. Blocks:** Adjust the minimum number of detection blocks that must be activated to trigger a motion alarm. Adjust the minimum number of detection blocks for Daytime and Nighttime independently.
- **Alarm Out...:** Select to associate the motion detected in the camera with alarm-out signals. The DVR will alert you the event by activating an external alarm or internal buzzer when the DVR detects a motion event.
- **Notify...:** Select to send an e-mail to the address set during *NETWORK – Mail* setup when the DVR detects a motion event.
- **Motion Ignoring Interval:** Adjust the motion ignoring dwell time. You can control excessive event logging and remote notification of motions detected after the motion dwell time by adjusting the motion ignoring dwell intervals. The DVR will not log and notify motion events occurred during the preset interval range. The recording for motion events will not be affected by the Motion Ignoring function.
- **Daytime Setup...:** Set up the daytime range. The DVR will consider the remaining time range as the nighttime.

No.	Type	Alarm-Out	Notify
<input type="checkbox"/> 1	NC		
<input type="checkbox"/> 2	NC		
<input type="checkbox"/> 3	NC		
<input type="checkbox"/> 4	NC		

Save Cancel

- The DVR can notify you when it senses an input on the alarm input connectors by sounding an alarm or beep or by sending an e-mail.
- **No.:** Select to set the alarm-in detection for entire alarm-in devices (No.) or an individual device.
- **Type:** Set up each input as NO (Normally open) or NC (Normally closed).

- **Alarm Out...:** Choose to associate the input detected in the alarm-in connectors with alarm-out signals. The DVR will alert you the event by activating an external alarm or internal buzzer when the DVR detects an alarm-in event.
- **Notify...:** Choose to send an e-mail to the address set during *NETWORK – Mail* setup when the DVR detects an alarm-in event.

## NETWORK

NETWORK

Network LAN DVRNS WebGuard Mail

Transfer Speed 1.0 Mbps (bps)

Quality Standard

Save Cancel

- **Transfer Speed:** Set up the transfer speed, and choose the unit of measure for the transfer speed between: **bps** (byte per second) and **ips** (image per second).
- **Quality:** Choose the quality for transferred image.

### NOTES:

- The higher Quality settings require higher Transfer Speed settings. The transfer speed you set is the maximum speed. Depending on the network environment, this speed may not be achieved.
- The local recording speed might be affected by various network bandwidth (Transfer Speed) conditions.

NETWORK

Network LAN DVRNS WebGuard Mail

Type Manual

IP Address 192.168.1.129

Gateway 192.168.1.254

Subnet Mask 255.255.255.0

DNS Server 0.0.0.0

Port Number Setup...

Save Cancel

- **Type:** Choose the type of network configuration from: Manual, DHCP and ADSL (with PPPoE).

*Manual:* Select when using a static IP address for network connection and set up LAN parameters manually. Adjust the numbers of the IP Address, Gateway and Subnet Mask.

*DHCP:* Select when the DVR is networked through DHCP (Dynamic Host Configuration Protocol). The DVR reads the IP address from DHCP network when selecting the **Save** button.

*ADSL:* Select when the DVR is networked through ADSL. Enter the ID and password for ADSL connection, and the DVR receives the IP address when selecting the **Save** button.

- **DNS Server:** Set up the IP address of the DNS server. If you set up the DNS Server, the domain name of the DVRNS server instead of the IP address can be used during the DVRNS Server setup.
- **Port Number Setup...:** Choose to set up port numbers.

### NOTES:

- Ask your network provider for your network connection type and connection information.
- If the DVR is configured for DHCP or ADSL network, the IP address of the DVR might change whenever the unit is turned on. If you want to use DVRNS function, you will need to get the IP Address of the DNS Server from the internet service provider.
- You will need to get the appropriate Port Numbers for each remote software related program from your network administrator. Do NOT use the same port number for two different programs, otherwise, the DVR cannot be connected with the PC running remote software program.
- The system restarts automatically after changing the port settings.

**CAUTION:** When changing the port settings, you must change the port settings on the PC running remote software program as well.

- **Use DVR Name Service:** Select to use DVR name service function.
- **DVRNS Server:** Enter the IP address or domain name of the DVRNS server.
- **Port:** Set up the port number of the DVRNS server.
- **Use NAT:** Select when using NAT.
- **DVR Name:** Enter the DVR name to be registered on the DVRNS server. Check if the name is available by selecting the Check button.

- **Help Desk:** Choosing the Save button registers the DVR on the DVRNS server. Proper DVRNS settings will display the help desk information of the DVRNS server.

#### NOTES:

- The DVRNS (DVR Name Service) allows you to connect to the DVR with the dynamic IP addresses or the domain name for remote connection. When using this feature, you can access your DVR remotely by using the DVR name instead of IP address. For the DVRNS feature, the DVR should be registered on the DVRNS server, and the DVRNS server settings on your DVR should match the settings on the registered DVRNS server. Any changes on the DVRNS server might cause improper operation.
- When LAN settings have been changed, set up the DVRNS after saving your LAN changes by selecting the Save button.
- You will need to get the IP address or domain name of the DVRNS server from your network administrator. You can use the domain name instead of IP address if you already set up the DNS server during the LAN setup.
- When using the NAT (Network Address Translation) device, refer to the NAT manufacturer's instructions for the proper network settings using NAT.
- The DVR name you entered should be checked by selecting the Check button, otherwise the DVRNS changes will not be saved. When entering no name or a name already registered on the DVRNS server, an error message displays.

#### CAUTIONS:

- **If you want to use the same DVR name registered on the DVRNS server after initializing the system using the factory reset, you need to contact the DVRNS server manager. Please record and save the help desk information before factory reset.**
- **The DVRNS registration will be limited to one DVRNS server. The DVR cannot be registered to multiple DVRNS servers. Please contact your network administrator when you want to register the DVR to another DVRNS server.**

- **Use WebGuard Service:** Select to use the WebGuard service. See *Appendix – WebGuard* for details.
- **Port:** Set up the port number for WebGuard program access.

NETWORK

Network LAN DVR/RS WebGuard Mail

☒ Enable

SMTP Server 0.0.0.0

Port 25

☐ Use SSL/TLS

Authentication <None>

Sender

Recipient

Save Cancel

- **Enable:** Select to set up the DVR to send an e-mail.
- **SMTP Server:** Set up the SMTP server IP address obtained from your system administrator.
- **Port:** Set up the SMTP server port number obtained from your system administrator.
- **Use SSL/TLS:** Select to send an e-mail via an SMTP server requiring SSL (Secure Sockets Layer) authentication.
- **Authentication:** Choose if the SMTP server needs authentication, and select **Use** in the Authentication box to enter user ID and password.
- **Sender/Recipient:** Choose to enter the sender's/recipients e-mail address. The e-mail address must include the "@" character to be a valid address.

## PTZ

PTZ

No.	Product	ID
1	Fastrax (HiTron)	1
2	None	0
3	None	0
4	None	0

Port RS485 Setup...

Save Cancel

- **No.:** Indicates a camera number.
- **Product:** Choose to select the model of installed PTZ device.
- **ID:** Choose to assign an ID to each PTZ device.
- **Port:** Choose to select the communication port. If the PTZ port is not set up, you will not be able to set up PTZ devices.
- **Setup...:** Choose to set up port speed, data bit, stop bit and parity of the connected device. Refer to the PTZ device manufacturer's instructions for the proper settings.

## STORAGE

STORAGE

Capacity 107.37 GB

Disk Bad Good (0%)

Temperature Good (50°C / 122°F)

S.M.A.R.T. Good

Recorded Data

From 2006/08/10 10:20:05

To 2006/08/16 17:30:10

Clear All Data...

Close

- **Capacity:** Displays the capacity of the storage device.
- **Disk Bad:** Displays the damage status of the storage device.  
*Not Formatted:* The device is not formatted.  
*Good:* The device is working properly though some portion (%) of the storage is damaged.  
*Bad:* More than 90% of the storage is damaged.
- **Temperature:** Displays the temperature of the storage device.  
*N/A:* The DVR cannot read the temperature.  
*Good:* The temperature is normal.  
*Bad:* The temperature is 70°C (158°F) or higher.
- **S.M.A.R.T.:** Displays S.M.A.R.T. information of the storage.  
*Good:* The storage condition is normal.  
*Bad:* Data cannot be written on or read from the storage device.  
*N/A:* The S.M.A.R.T. monitoring is not working or supported.
- **Recorded Data:** Displays the time information about recorded data of the device. Selecting **Clear All Data...** will clear all video data except the system log. When the hard disk drive has not been formatted, the **Clear All Data...** button changes to the **Format...** button to format the hard disk drive.

**NOTE:** When the S.M.A.R.T. displays *Bad*, the screen displays a message box. Once the message box appears, replacing the hard disk drive is recommended, usually within 24 hours.



## Appendix


### WEBGUARD

WebGuard allows you to access a remote DVR, monitor live video images and search recorded video using Internet Explorer web browser anytime from virtually anywhere.

Computer system requirements for using the WebGuard program are:

- Operating System: Microsoft Windows® 2000, Microsoft Windows® XP or Microsoft Windows® Vista
- CPU: Intel Pentium III (Celeron) 600MHz or faster
- RAM: 128MB or higher
- VGA: 8MB or higher (1024x768, 24bpp or higher)
- Internet Explorer: Version 6.0 or later

Start Internet Explorer on your local PC. Enter the IP address of the DVR and the WebGuard port number set during the WebGuard setup (<http://IP address:port number>), or enter the “<http://www.dvronline.net>” in the address field.

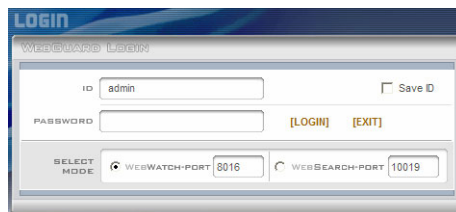

Select between the WATCH (Web monitoring) and SEARCH (Web search) modes and enter the appropriate port number of the program. Entering ID and PASSWORD and clicking the [LOGIN] button logs in using the selected mode. Selecting **Save ID** saves the ID you entered. You will need to enter DVR ADDRESS (DVR IP address or DVR name registered on the DVRNS server when selecting Use DVRNS) when entering <http://www.dvronline.net>.

#### NOTES:

- WebGuard only works with Microsoft Internet Explorer and will NOT work with Netscape.
- When running WebGuard in the Microsoft Windows Vista operating system, it is recommended to start Internet Explorer with elevated administrator permissions. Click the right mouse button on the Internet Explorer icon and select the *Run as administrator* option from the context menu. Otherwise, some functions of the WebGuard might be limited.
- There might be a problem with screen display or screen update due to low image transmission speed when using the Microsoft Windows Vista operating system. In this situation, it is recommended you disable the Auto Tuning capability of your computer. Run the Command Prompt with elevated administrator permissions (Go to the Start Menu → Accessories → *Command Prompt* → Click the right mouse button and select the *Run as administrator* option). Then enter “netsh int tcp set global autotuninglevel=disable” and hit the enter key. Restart your computer to apply the changes. If you want to enable the Auto Tuning capability again, enter “netsh int tcp set global autotuninglevel=normal” after running the Command Prompt with elevated administrator permissions. Restart your computer to apply the changes.
- When running the updated WebGuard for the first time, Internet Explorer might occasionally load the information of the previous version. In this case, delete the temporary internet files by selecting *Tools* → *Internet Options* → *General* tab, and then run WebGuard again.

**NOTES:**

 
- You will need to get the appropriate IP address for the DVR you want to connect to and the WebGuard port number from your network administrator.
- The port numbers for *WATCH* and *SEARCH* should be the same port numbers used for *Remote Watch* and *Remote Search* set during the network setup (*Main Menu – NETWORK – LAN* tab).

**Web Monitoring Mode**

The WebWatch is a remote web monitoring program that allows you to monitor live video transmitted in real-time from the remote DVR.



- ① Log Out: Click to log out the WebGuard program.
- ② WebSearch: Click to access to the web search mode.
- ③ WebWatch Logo: Position the mouse pointer on the logo to see the version of the WebGuard program.
- ④ DVR Information: The DVR Information window displays the login information of WebGuard.
- ⑤ Display Mode: Select the desired display mode. When changing the screen format, the selected camera on the current screen will be located in the first cell of the new layout.
- ⑥ Camera Buttons: Select the camera to be viewed.
- ⑦ Image Adjustment: Click to adjust the brightness, contrast, saturation and hue of monitoring image.
- ⑧ PTZ Control: Click to control pan, tilt and zoom of the camera from a remote site.
- ⑨ Click to control an alarm out device at the remote site.



- ⑩ Save Image: Click to save the current image as a bitmap or JPEG file format.
- ⑪ Event Status Window: The event status window at the bottom displays a list of events that were detected from the remote site.

Normal Event

Alarm In On

Motion Detection

Video Loss

- ⑫ **Camera Title and Aspect Ratio:** Selecting a camera on the screen and clicking the right mouse button allows you to change the camera name and the image aspect ratio displayed on each camera.

Change Camera Title
Enable Audio
Aspect Ratio ▾

## Web Search Mode

The WebSearch is a remote web search program that allows you to search recorded video on the remote DVR.







- ① **Log Out:** Click [Log Out] to log out the WebGuard program.
- ② **WebWatch:** Click [WebWatch] to access to the web monitoring mode.
- ③ **WebSearch Logo:** Position the mouse pointer on the logo to see the version of the WebGuard program.
- ④ **DVR Information:** The DVR Information window displays the time information of recorded data on the remote DVR and login information of WebGuard.
- ⑤ **Zoom/Brightness Adjust/Image Processing:** Click [Zoom Out] to zoom out or zoom in the recorded image. Click [Brightness] to adjust the brightness of the recorded images. Click [Blur], [Sharpen], [Equalize], [Interpolation], and [Revert] to blur, sharpen, equalize and interpolate playback images.
- ⑥ **Playback Function Buttons:** The Playback Function Buttons include fast backward, pause, play, fast forward, go to the first image, go to the previous image, go to the next image, and go to the last image.
- ⑦ **Display Mode:** Click the desired display mode.
- ⑧ **Time-lapse Search:** Click [Time-lapse Search] to enter the time-lapse search mode which allows you to search for recorded data by time and then play back images found within the time parameters. The Timetable window located at the bottom displays the time information for the image of the date selected on the calendar. Clicking a specific time displays the image recorded at that time on the screen. Selecting [Go To] allows you to display an image from a specific time.
- ⑨ **Event Search:** Click [Event Search] to enter the event search mode which allows you to search for event log entries using specific conditions and play back the images associated with those event entries. The event status window at the bottom displays a list of event types of playback images.

Blur
Sharpen
Equalize
Interpolation
Revert

hour	<input type="text"/>
minute	<input type="text"/>
second	<input type="text"/>
[Go To] [Cancel]	

- |                  |                  |                  |                 |
|------------------|------------------|------------------|-----------------|
| Normal Event     | Emergency Event  | Alarm In On      | Alarm In Off    |
| Motion Detection | Video Loss       | Recorder Bad     | Disk S.M.A.R.T. |
| Disk Bad         | Disk Almost Full | Disk Temperature |                 |

- ⑩ **Save/Print:** Click  to save any video clip of recorded data as an executable file, or click  to save the current image in a bitmap or JPEG file format. Click  to print the current image on a printer connected to your computer.
- ⑪ **Reload:** Click  to reload the recording data.
- ⑫ **Timetable:** The Timetable displays recorded data of the selected camera by time (in hour segments).
- ⑬ **Camera Title and Aspect Ratio:** Selecting a camera on the screen and clicking the right mouse button allows you to change the camera name and the image aspect ratio displayed on each camera screen.

Change Camera Title
Enable Audio
Aspect Ratio ▾


**NOTE:**

- The remote site connection in the Web Search mode will automatically be disconnected if there is no activity for 30 minutes.
- Image processing works only in the pause mode.
- A camera name change in the Web Watch and Web Search mode does not affect the camera name set up on the remote site. Leaving the Camera Title blank causes the camera name set up on the remote site to display.

## DVR NAME SERVICE (DVRNS)

**Overview**

Using Static IP addresses in LAN/WAN networks requires high management overhead and increases the cost burden to users. Therefore, it has become essential for DVRs to support Dynamic IP addresses in ADSL/VDSL networks using DHCP (Dynamic Host Configuration Protocol). This reduces cost burdens and increases cost effectiveness for system users. Use the following steps to set up a system using DVRNS.

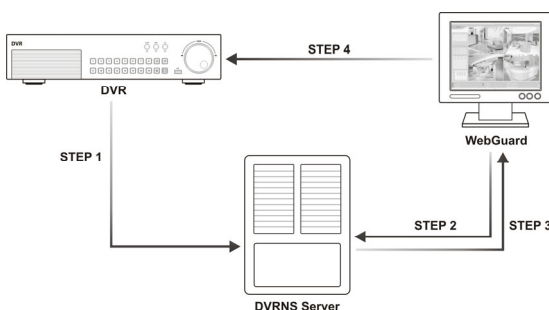**System Configuration**

- **STEP 1 (DVR → DVRNS Server):** Register the unit name and IP address of the DVR during the NETWORK – DVRNS setup. This unit name and IP address will be registered on the DVRNS server directly.
- **STEP 2 (WebGuard → DVRNS Server):** Request the IP address of the DVR using the registered unit name of the DVR you want to connect to.

- **STEP 3 (DVRNS Server → WebGuard):** The DVRNS server notifies WebGuard of the requested IP address.
- **STEP 4 (WebGuard → DVR):** Connect to the target DVR using the IP address returned from the DVRNS server.

**NOTE:** You should follow steps 2 to 4 whenever connecting to the DVR because the DVR name and IP address might change at any time.

## CLIP PLAYER

Disconnect the USB device from the DVR and connect it to your PC. You do not need to install any special software on your personal computer to review the video. The copied clip contains the Player program. Double click the target clip to start the Player program.



The ClipPlayer Screen displays the clip images.


- ⏮ : Select to go to the beginning of the video clip.
  - ⏪ : Select to play the video clip in fast reverse.
  - ◀ : Select to go back one frame of the video clip.
  - ▶ : Select to play the video clip.
  - ⏩ : Select to go forward one frame of the video clip.
  - ☰ : Select to display a menu box.
  - Save:* Select to save the current image in a bitmap file format on the local hard disk drive or floppy disk.
  - Print:* Select to print the current image on the printer connected to your computer.
  - Info.:* Select to display channel, title, time, type, size and resolution information about the image.
  - Image Processing:* Select to control brightness, blur and sharpness of playback images.
  - Video Format:* Select to find appropriate display settings for the type of graphics card installed in your PC. Use the option when you are experiencing improper image display.
  - Show Text In:* Select to display video with text-in data if the video was recorded with text-in data.
  - 🔍 : Select to display a menu box.
  - Normal:* Select to zoom out the current image.
  - Double:* Select to zoom in the current image.
  - 🖥 : Select to display the image full screen.
  - ✅ : Indicates the clip file has not been tampered with.
  - ❌ : Indicates the system has detected tampering.
- Slide Bar: Select to change playback position.
- Full Screen: Place the mouse cursor on an image and click it to display the image in full screen.

**NOTES:**

- It is suggested that the computer used for the Player program has at least an 800MHz Pentium III. If your CPU is slower than this, video clips recorded at maximum speed with very high image quality will be played back slowly. Also DirectX 8.0 or higher is required to install, and the VGA card with 16MB or higher video RAM is recommended for proper operation.
- Image Processing works only in the single-screen layout and pause mode.
- If you are not sure about the appropriate *Video Format* option, try each option until the image displays properly.
- Proper image display depends on the display settings of your PC. If you are experiencing display problems, click the right mouse button on the background screen and select Properties → Settings then set the *Color quality* to "32 bit". Then select *Advanced* → *Troubleshoot*, and then set the *Hardware Acceleration* to "Full". Please make sure that DirectX version 8.0 or higher has been installed if the display problem continues. To check the version of DirectX, click *Start* → *RUN* and type "dxdiag" then hit the enter key which will display DirectX Diagnostic Tool dialog box. Then move to the Display tab and make sure *DirectDraw Acceleration* is set to "Enabled". Test DirectDraw by selecting the *DirectDraw Test* button. After changing the settings, update the driver version of the VGA card. If you still have display problems after changing all display settings as described above, try replacing the video card. Video cards with an ATI chipset are recommended.
- If the VGA card or monitor does not support 640x480 video resolution, Full Screen might not be displayed properly. If this happens, press the *ESC* key on your PC keyboard to return to the normal screen mode.

**TIME OVERLAP**

If the DVR's time and date have been reset to a time that is earlier than the existing recorded video, it is possible for the DVR to have more than one video stream in the same time range. In this case, you can search overlapping video streams individually by selecting a specific segment. For example, when the DVR has recorded video from one to five o'clock and the user changes the time backward from five to three o'clock and then continues recording until six o'clock, there will be two video streams and segments from three to five o'clock.

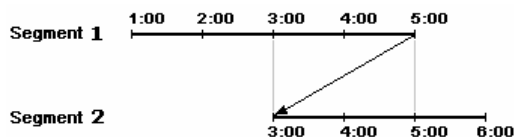

You can search overlapping video streams by selecting a specific time or time range.

If you want to search recorded video at four o'clock during the overlapping time range using a search menu such as **Go to the Date/Time**, select the segment you want to search.

Select a Segment
1: Segment 2
2: Segment 1

If you want to search recorded video from four to five o'clock during the overlapping time range using a search menu such as **Event Log Search**, it is possible for the DVR to have two overlapping start and stop times. You will be asked to select one of the overlapping start and stop times from the search time ranges as follows:

Select a Range
1: Scope 1 ~ 1
2: Scope 1 ~ 2
3: Scope 2 ~ 2

- From four o'clock of the first segment to five o'clock of the first segment
- From four o'clock of the first segment to five o'clock of the second segment
- From four o'clock of the second segment to five o'clock of the second segment

## SYSTEM LOG

LOG MESSAGE	LOG MESSAGE
Boot Up	Auto Deletion
Upgrade (Local)	Search Begin (Local/Remote)
Upgrade Failure (Local)	Search End (Local/Remote)
Setup Begin	Clip-Copy Begin (Local/Remote)
Setup End	Clip-Copy End (Local/Remote)
Setup Imported	Clip-Copy Cancel (Local/Remote)
Setup Import Fail	Clip-Copy Failure (Local/Remote)
Setup Exported	Time Change (Local)
Setup Export Fail	Time Zone Change (Local)
Setup Export Cancel	DISK FULL
Schedule On	Shutdown
Schedule Off	Restart
Clear All Data (Local)	DISK# BAD
Format Disk	

## ERROR CODE NOTICES

SYSTEM UPGRADE RELATED		CLIP COPY RELATED	
Number	Description	Number	Description
0	Unknown error.	0	Unknown error.
1	File version error.	1	Device error.
2	Operating system version error.	2	Mounting failed.
3	Software version error.	3	No media.
4	Kernel version error.	4	Invalid media.
100	Upgrade device mounting failed.	5	File already existed.
101	Package is not found.	6	Not enough space.
102	Extracting package failed.	7	Creating temporary file failed.
103	LILO failed.	8	Opening disk failed.
104	Rebooting failed.	9	Formatting disk failed.
105	Invalid package.	10	Database has been changed.
300	Remote connection failed.	11	Appending failed.
301	Remote network error.	12	Bad sector.
302	Remote upgrade is not authorized.	13	No executable file.
303	Saving remote package failed.	14	Opening executable file failed.
304	Remote upgrade is cancelled by the user.	15	Writing executable file failed.
400	USB device mounting failed.	16	Creating image failed.
401	Reading upgrade package on the USB device failed.	17	Burning failed.
402	Copying upgrade package on the USB device failed.	18	Burning is out of time.
500	System is busy clip copying.		

## TROUBLESHOOTING


PROBLEM	POSSIBLE SOLUTION
No Power	<ul style="list-style-type: none"> <li>• Check power cord connections.</li> <li>• Confirm that there is power at the outlet.</li> </ul>
No Live Video	<ul style="list-style-type: none"> <li>• Check camera video cable and connections.</li> <li>• Check monitor video cable and connections.</li> <li>• Confirm that the camera has power.</li> <li>• Check camera lens settings.</li> </ul>
No Live Video on the VGA Monitor	If the DVR does not detect a VGA monitor automatically, press and hold the DISPLAY button on the front panel for 5 seconds or longer to switch the video output from Video out to VGA out.
DVR has stopped recording	If hard disk drive is full, you will either need to delete video or set the DVR to the Overwrite Mode.
DVR displays an error message stating that the last recorded image date and time is later than the current date and time setting of the DVR.	The DVR will automatically reset the time and date of the unit, according to the time and date of the last recorded image. If this is not the correct time and date, reset the time and date manually. If the correct time and date is earlier than the last recorded image, any video with a later time and date will be lost when resetting the correct time and date.

## CONNECTOR PIN OUTS

### I/O Connector

#### Output

NO C NC G

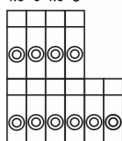

AI1 AI2 AI3 AI4 G ARI

#### Input

AI (1 to 4)	Alarm Inputs 1 to 4
G	GND (Chassis Ground)
ARI	Alarm Reset In
NC	Alarm Out (Normally Closed)
C	Common
NO	Alarm Out (Normally Open)

### RS485 Connector

RS-485


- +



Master Unit		Slave Unit	
-	→ To	→	TX-
+	→ To	→	TX+
-	→ To	→	RX-
+	→ To	→	RX+



## MAP OF SCREENS

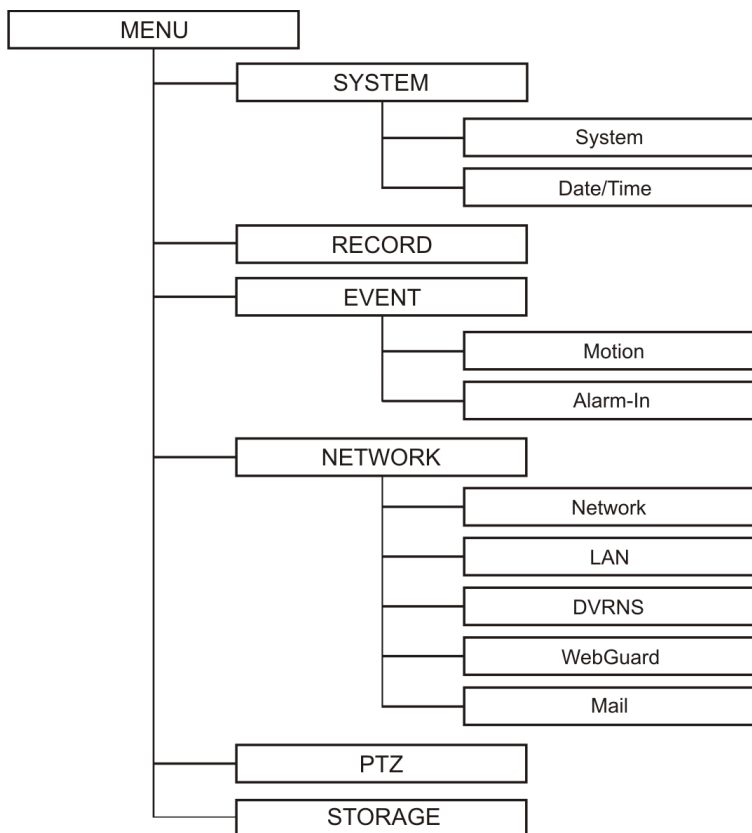

## SPECIFICATIONS

VIDEO	
Signal Format	NTSC or PAL (Auto detect)
Video Input	Composite: 4 inputs, 1 Vp-p, auto-terminating, 75 Ohms
Monitor Outputs	Composite: One (BNC), 1 Vp-p, 75 Ohms VGA: One (Auto detect)
Video Resolution	Composite: 720x480 (NTSC), 720x576(PAL) VGA: 720x480@60Hz (NTSC), 720x576@75Hz (PAL)
Playback/Record Speed (images per second)	60/60ips (NTSC), 50/50ips (PAL)
INPUTS/OUTPUTS	
Alarm Input	4 TTL, NC/NO programmable, 4.3V threshold
Alarm Output	1 relay out, terminal block, NC or NO, 0.5A @ 125VAC, 1A @ 30VDC
Alarm Reset In	1 TTL, terminal block
Internal Buzzer	80dB at 10cm
Network Connectivity	10/100 Base Ethernet
CONNECTORS	
Video Input	Composite: 4 BNC
Monitor Output	Composite: 1 BNC VGA: 1 DB15
Alarms	Terminal block
Ethernet Port	RJ-45
RS-485 Serial Port	Terminal block, telemetry control
USB Port	1 on front panel (2.0)
STORAGE	
Primary Storage	EIDE hard disk drive
Secondary Storage	USB hard disk, CD-RW or flash drive
GENERAL	
Dimensions (W x H x D)	13.38" x 1.83" x 12.20" (340.0mm x 46.5mm x 310.0mm)
Unit Weight	6.67 lbs. (3.03kg)
Shipping Weight	9.88 lbs. (4.49kg)
Shipping Dimensions (W x H x D)	18.11" x 5.63" x 16.14" (460mm x 143mm x 410mm)
Operating Temperature	41°F to 104°F (5°C to 40°C)
Operating Humidity	0% to 90%
Power	100-240 VAC, 0.8-0.4A, 60/50Hz
Approval	FCC, CE, CB, UL

Specifications are subject to change without notice.

## **WEEE (Waste Electrical & Electronic Equipment)**

### ***Correct Disposal of This Product***

***(Applicable in the European Union and other European countries with separate collection systems)***



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.